
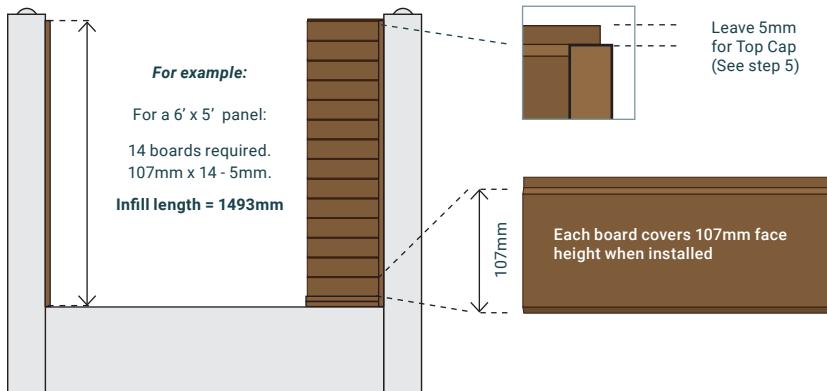


1. Measure distance between posts

Measure the INTERNAL distance between the posts. Measuring from inside each recess.

Generally, this measurement is between 1825mm & 1830mm, depending on the dimensions of your posts.

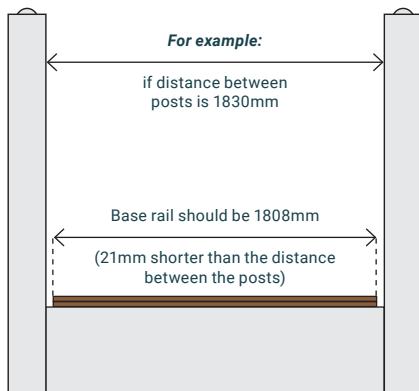


2. Cut the Easy-Fit base rail to length

The base rail should be **at least 21mm shorter** than the internal distance measured between the posts. This allows for the vertical infills.

Very Tight Fit	Tight Fit	Slightly Loose
Minus 21mm	Minus 22mm	Minus 23mm

Eg. 1830mm - 22mm = Base rail length **1808mm**

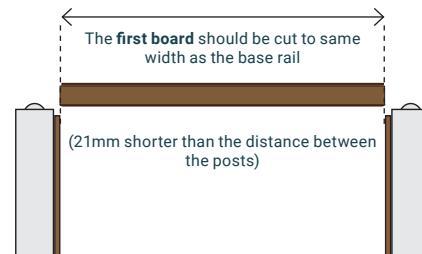

4. Cut the Easy-Fit Boards to length

The first board needs to be cut to the same measurement as the Base Rail.
As you build your new fence, you may need to adjust the lengths to suit your own fence

3. Cut the Easy-Fit infills to length - How high does your fence need to be?

The length of each infill should equal the number of boards x 107mm minus 5mm for the Top Cap.


eg. Replacing a 6' x 5' traditional panel

- Number of boards = 14
- Face cover per board = 107mm
- Deduction for Top Cap seating = 5mm
- Infill length: $107\text{mm} \times 14 - 5 = 1493\text{mm}$

Typical number of Easy-Fit boards required vs Traditional Fence Type

6' x 3'	6' x 6'	6' x 5'	6' x 6'
8 boards	12 boards	14 boards	16 boards

Note: Gravel board may need to be adjusted to correct alignment

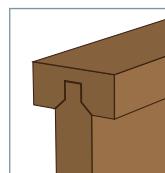

If measured and cut correctly, the Easy-Fit Top Cap should finish flush on the shoulder of the top board as pictured.

If this doesn't align exactly, check gravel board for level or using an off-cut, gently tap the Top Cap on both sides.

A suitable adhesive can be used to secure the Top Cap if place.

5. Install the Top Cap

Each length of Easy-Fit Component is a minimum of 1830mm.
Check before hand as you may not need to cut the Top Cap.